

# Hound Heater™ Installation Instructions

## Tools Required:

You will need a measuring device, drill, 1 3/16" wood bit, screw driver and six wood screws (not included)



Figure 1

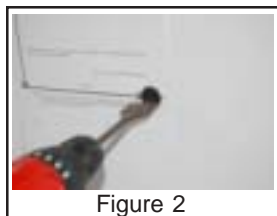


Figure 2



Figure 3



Figure 4



Figure 5



Figure 6



Figure 7

Step 1 ..... Tape the Hound Heater mounting template in any corner of the dog house. We suggest mounting it away from your entrance. Fig. #1

Step 2 .... Place the bit in the center of the template's black circle. Fig. #2

Step 3 .... Drill a hole all the way through the wall. Fig. #3

Step 4 .... Carefully feed the cord all the way through the previously drilled hole making sure the cord is not kinked. Fig #4

Step 5 .... Mount the Hound Heater in an up right position, using three sturdy wood screws. The unit must be mounted with the flat side up, on a side wall. Fig. #5

Step 6 ..... Mount the Hound Heater Heat Shield 1-2 inches above the top of the Hound Heater. The purpose of the shield is to deflect the rising heat and disperse it more efficiently in your pet's house. It will also help keep debris off the heater's top. Fig. #6

Step 7 ..... Set the thermostat to the desired temperature for your pet. Low - Med. is 35-50F, Med. to High is 50-80F These are approximate. Turn the dial clockwise to raise the temperature. Fig. #7

Step 8 ..... Plug in the unit into a GFI outlet and you are done!!

---

• The Hound Heater Dog House furnace is powered by a special 150 watt heating element.

---

• When you set the thermostat, the unit will run at full power until the desired temperature is reached.

---

• Turning it to the maximum amount WILL NOT make it run any hotter.

Because all dog houses are different sizes, shapes, insulation values etc., reaching the desired temperature will vary greatly. It is EXTREMELY important that your

## • WARRANTY •

If you should experience ANY PROBLEMS with your Hound Heater, please contact the Hound Heater Company directly. DO NOT contact your place of purchase. Contacting Hound Heater will greatly speed up your service. Please go to: [www.houndheater.com](http://www.houndheater.com) and use the email contact on the site or simply use: [mhill@izoom.net](mailto:mhill@izoom.net)